


Select year and connector. Locate and tap wire from connector terminal shown. Connect new wire to KeeSmart option terminal "G". Connectors are viewed from face, not from wire side.


'87-'92 ALLANTE USE
BCM CONNECTOR "C1"

"WHITE"
(LH door ajar circuit #156)

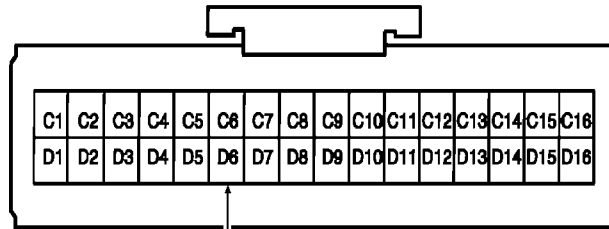

"ORANGE"
(LH door ajar circuit #125)

'93 ALLANTE USE
BCM CONNECTOR "C2"

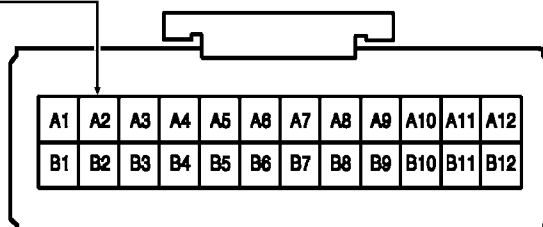

NOTE: one or more wires may use the same colors. Select wire by color and connector terminal location.